



## PREMIUM AFTERMARKET WIND DEFLECTORS

### Ford Mustang 6 convertible 2014-2020 wind deflector fitting instructions

#### What's in the box

- 1 x wind deflector
- 1 x installation manual
- 2 x wind deflector plugs (left & right)

Product No: 13.20.01.01

Product No: 13.21.01.01



#### PLEASE NOTE

If your car **has** the factory fitted holes you can easily click the wind deflector into place.











If your car **doesn't have** factory fitted wind deflector plugs it wasn't ordered with a wind deflector and drilling is always required. We suggest your read these instructions first to give you an idea of the sequence of fitting this draft stop.



## PREMIUM AFTERMARKET WIND DEFLECTORS



- 80% Reduction in wind blast & noise
- No. 1 accessory for convertibles
- OEM quality
- Guaranteed to fit
- Made in Europe
- Fast & easy installation

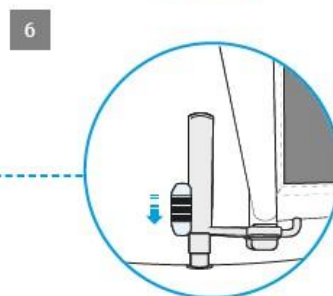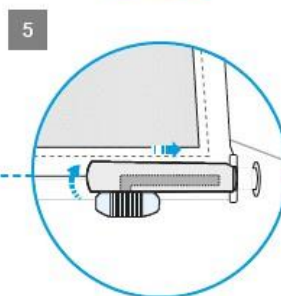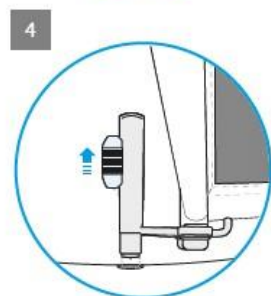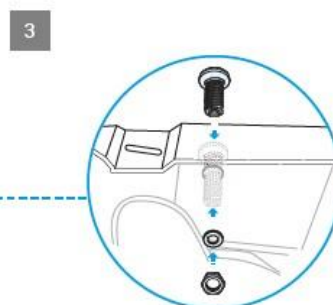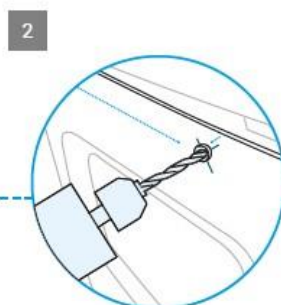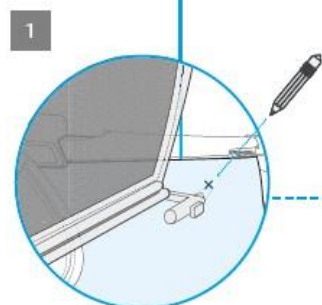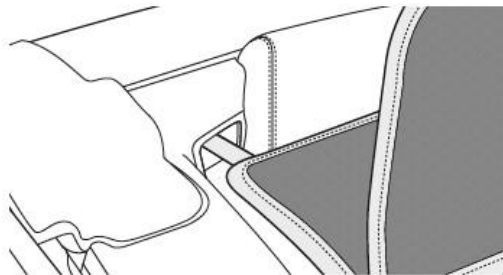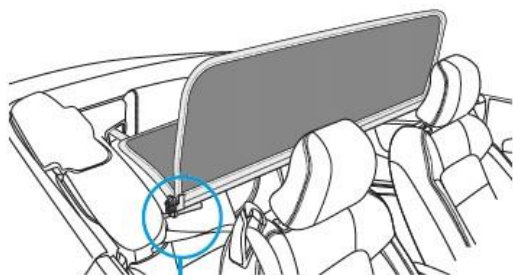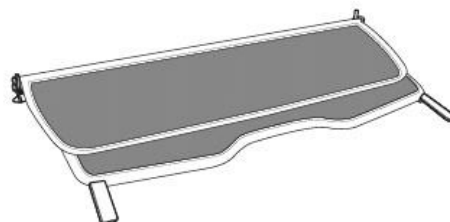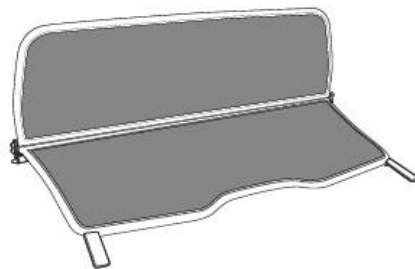

|                                                                                            |                                                                                            |                                                                                             |
|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <br>2 x | <br>2 x | <br>2X |
|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|



## PREMIUM AFTERMARKET WIND DEFLECTORS

### Tools required

- 1 x drill
- 1 x drill bit 12mm for plastic
- 1 x wrench 17 mm

### Parts supplied

- 1 x wind deflector
- 1 x manual
- 2 x wind deflector plugs M12

### STEP 1

Place the wind deflector in the car and mark the position of the wind deflector pins. The correct position is **42cm** from the rear seatbelt forwards.





## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 2

Measure 2.5 cm from the edge of the side panel downwards. Mark this position.







## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 3

Drill a hole with a 12 mm drill bit.





## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 4

Pull of the plastic cover of the side panel.





## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 5

Remove the bolt and washer of the supplied plugs and push the plug through the drilled hole.



### STEP 6


Place the washer over the plug and secure the plug with the supplied nut. **Do not overtighten the nut.** Since the plug is made of plastic and it may break if you overtighten it.







## PREMIUM AFTERMARKET WIND DEFLECTORS

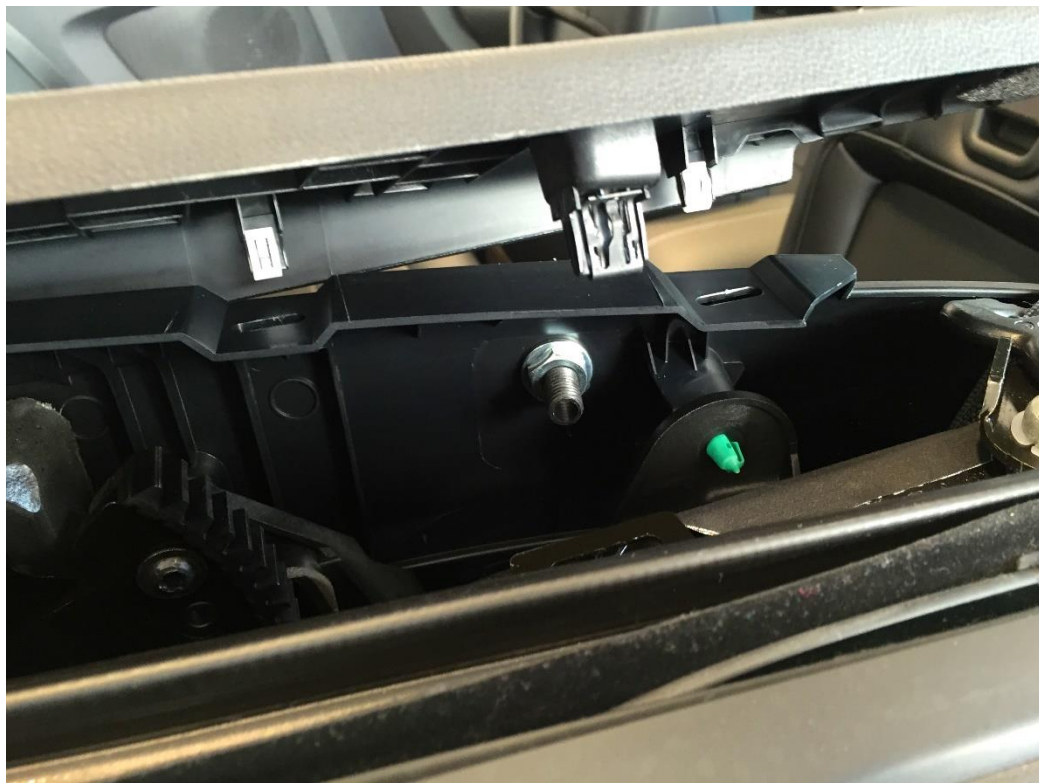

### STEP 7

Reinstall the plastic cover of the side panel.





## PREMIUM AFTERMARKET WIND DEFLECTORS

### STEP 8

Place the wind deflector in the car. First slide the rear brackets into the gaps of the rear seat belts.




### STEP 9

Unlock the wind deflector pins and push them into the wind deflector plugs.





## PREMIUM AFTERMARKET WIND DEFLECTORS

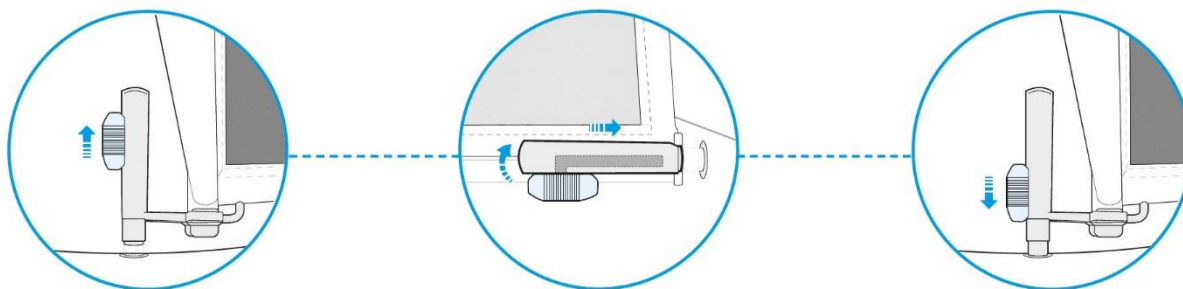

### STEP 10

Go out for a drive and enjoy your APERTA wind deflector!

## FORD MUSTANG 6 Cabriolet

Wind deflector / Windschott / Windstop

