



PREMIUM AFTERMARKET WIND DEFLECTORS

INSTALLATION INSTRUCTIONS

Aston Martin DB9 Wind Deflector 2004-2016

Product No.: 02.00.01.01 (BLACK)

Product No.: 02.00.01.03 (TAN)

Product No.: 02.00.02.01 (ALUMINIUM-BLACK)

What's in the box

1 x wind deflector

1 x installation manual

2 x wind deflector plugs (left & right) you only need these if you have a 2004 or 2005 model without factory fitted bungs.







ATTENTION

If your car **has** the factory fitted bungs you can easily click the wind deflector into place.

1

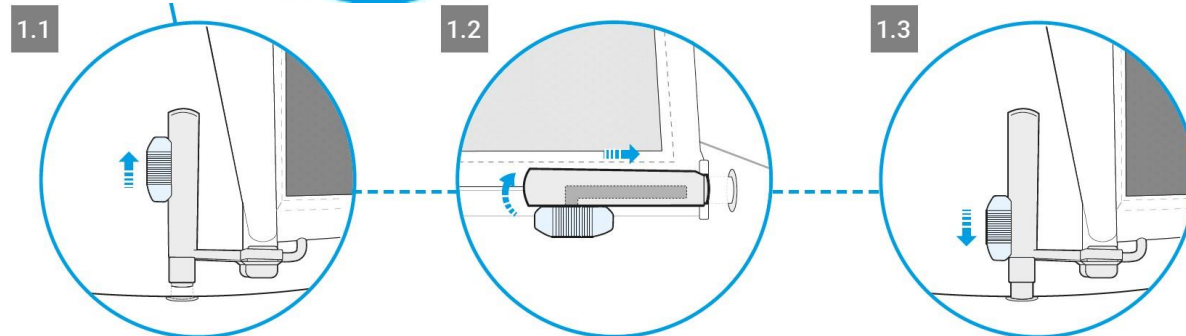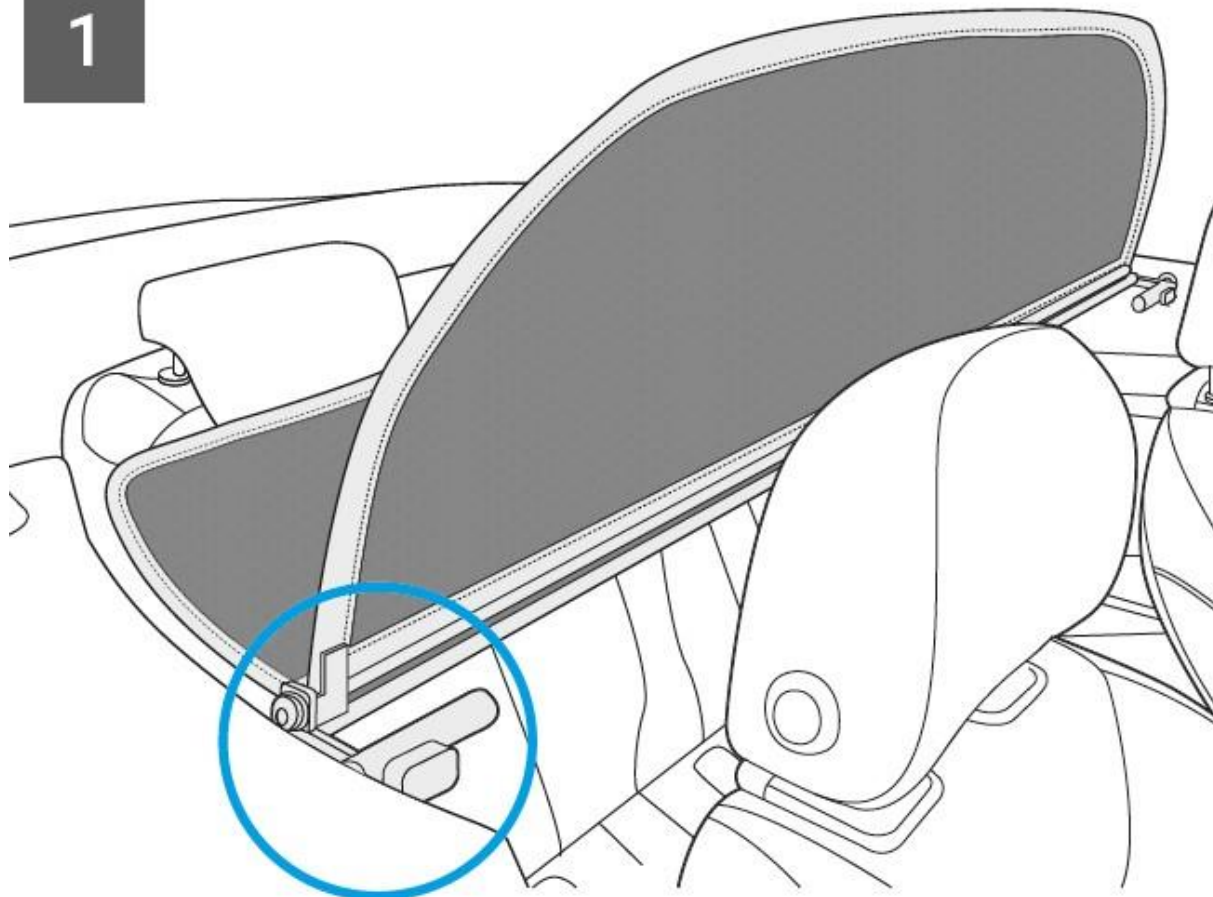



PREMIUM AFTERMARKET WIND DEFLECTORS

INSTALLATION INSTRUCTIONS

ATTENTION

If your car **doesn't have** factory fitted wind deflector plugs (2004 & 2005 models only) drilling is **always** required.

Tools required:


- 1 x torx screwdriver
- M12 drill

Parts supplied:

- 1 x wind deflector
- 1 x manual
- 2 x wind defelctor plugs M12
- 2 x nuts
- 2 x washers

STEP 1

First you need to remove both top frame covers. Push the cover backwards, unhook the cover and take it out.

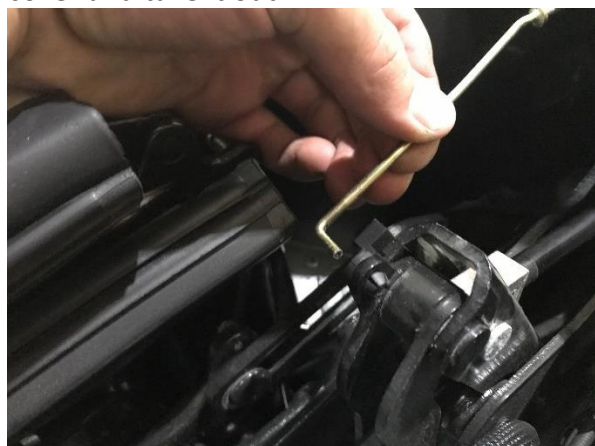

STEP 2

Unscrew all Torx screws as show on the pictures below.





STEP 3


Remove the cover frame.






STEP 4


Place the wind deflector in the car and mark the position of the wind deflector pins.

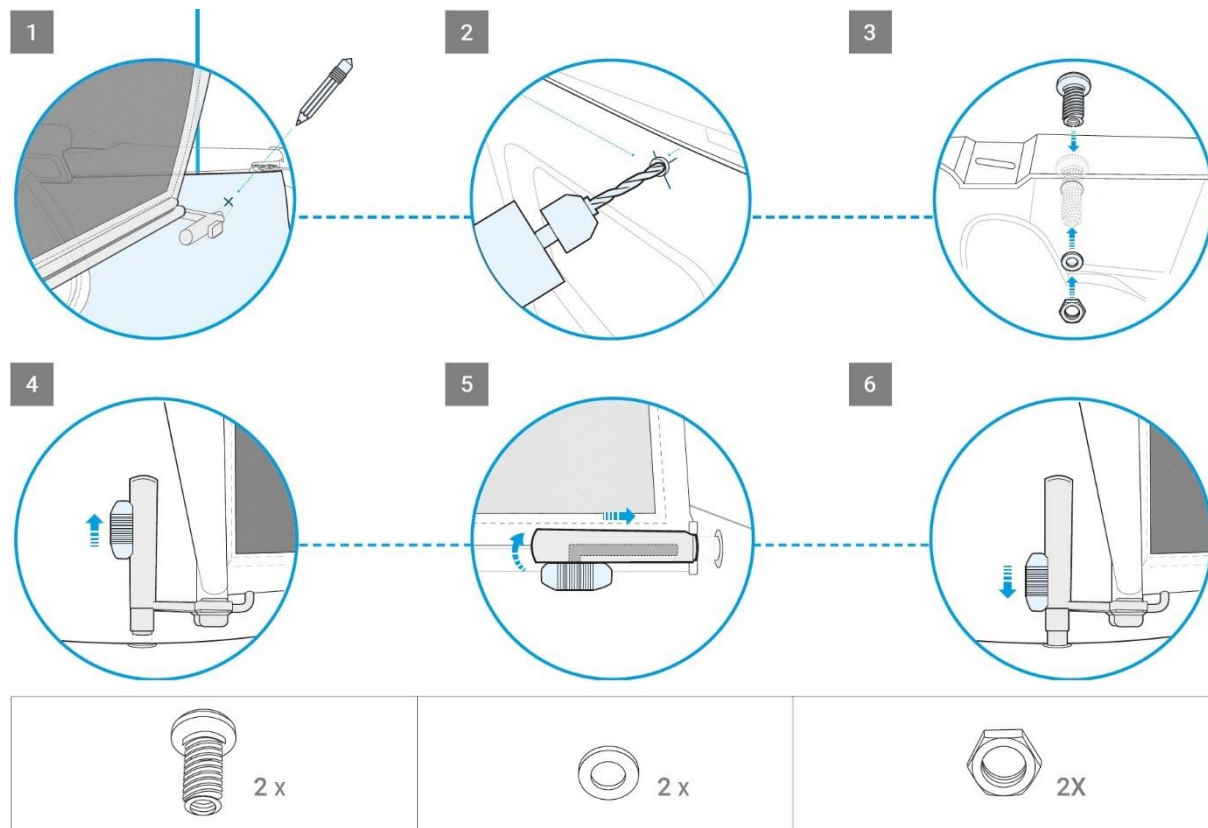

STEP 5

Drill the holes on the marked position with a 12mm drill. The side panels are made of plastic so there not much force needed. Then install the plugs, **don't tighten them to much** since there are made of plastic the may break if you tighten them to much.

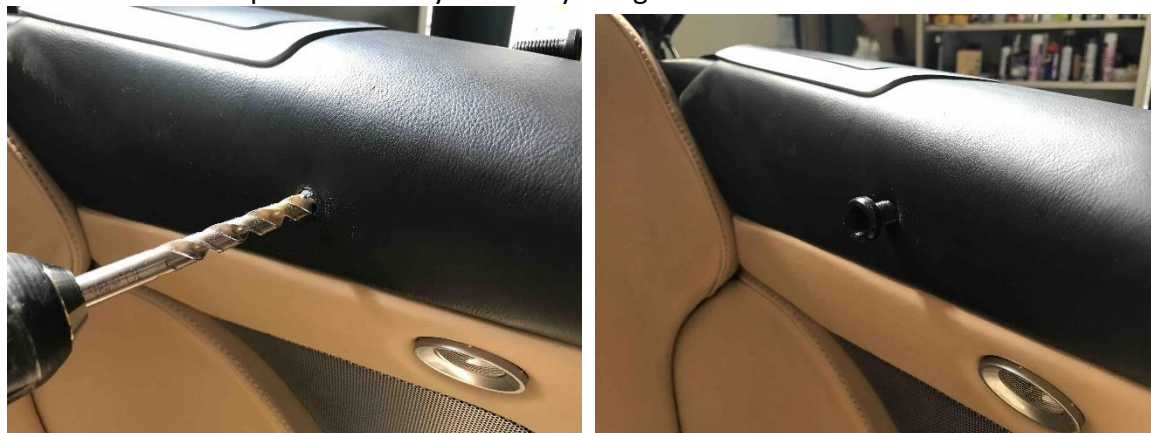

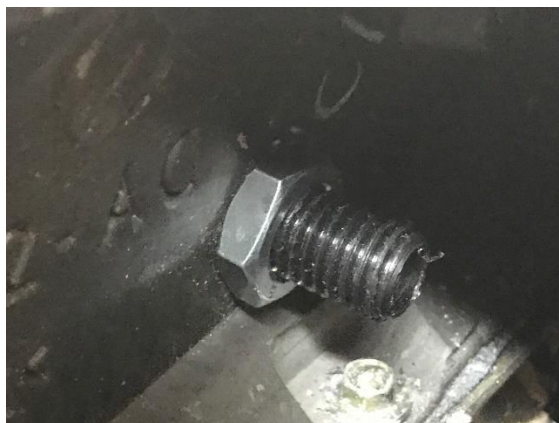

STEP 6

Slide the wind deflector into the slots of the rear seatbelts and click the wind deflector pins into the installed plugs. Finally reinstall all frame covers back in into the car.



STEP 7

Go out for a test drive and enjoy your wind deflector!

